

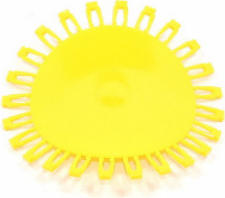





Miscellaneous

Order code	Picture	Description	Comments
5903.07.200		NP 4172. 5°	Program cams for plastic clips
5903.07.100		NP 4160. 6°	Program cams for plastic clips
5903.07.301		24 Stück Reiter	Set of clips
5903.07.900		NP 4172. 5°	Mounting kit cam with clips incl 24 Plastic clip
5903.07.800		NP 4160. 6°	Mounting kit cam with clips incl 24 Plastic clip
6099.07.778		for NK4201 / NK4101	Program key PSN (Schwarz)

Miscellaneous

Order code	Picture	Description	Comments
5903.07.400		for NK4201 / NK4101	Program key QS (Orange)
5903.05.900		PS	Program key (Yellow)
5915.06.100		für NP4172 / NP4172	Tweezers
6099.07.160		SD2 for NV4101	Screw driver
6099.08.770		Turning knob	Plastic material