


Serie ESM 84


Ausgangskanäle / Output channels

cp = Rasterabstand / Click point
p = Periode

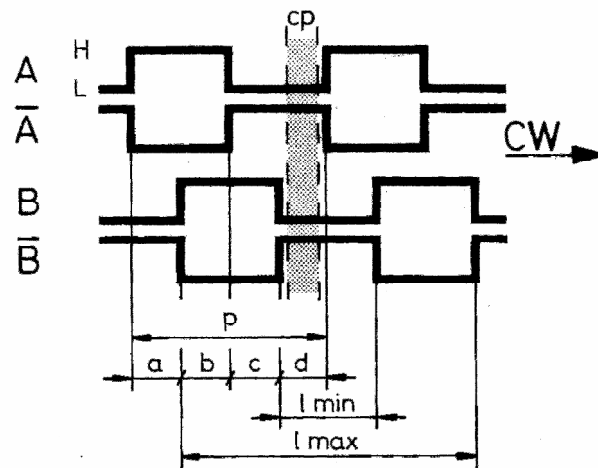

Ausgangstreiber / Output driver

Line driver (RS 422)

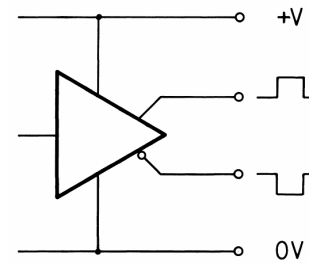

Anschlüsse / Connection

Schraubklemme / Terminal block

